
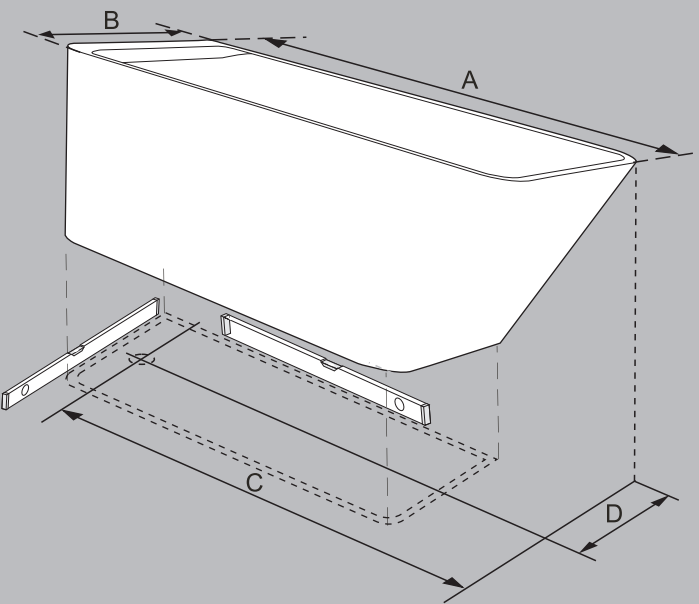



FLORENCE FREESTANDING BATH TUB

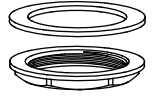



Cm	A	B	C	D
150X75X58	150	75	120	37.5


Used drain (Not supplied with bathtub) meets the requirement of ASME A112.18.2/CSA B125.2
*Always follow the appropriate plumbing code

A 1x


B 1x

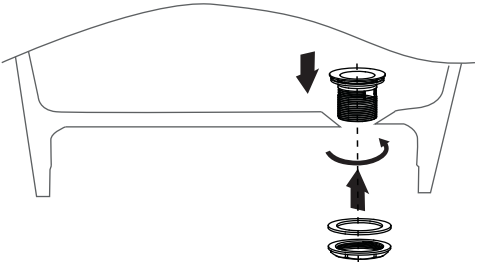
1

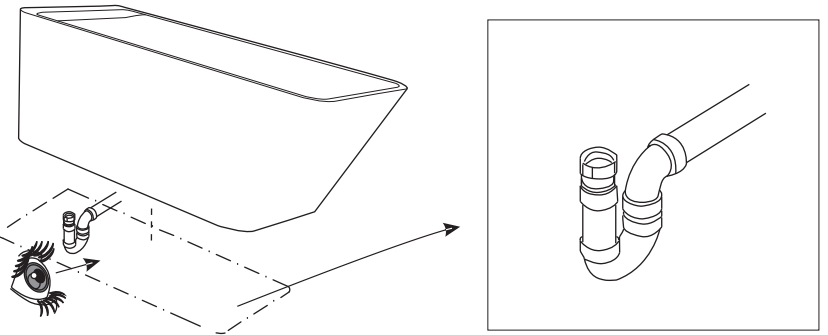2

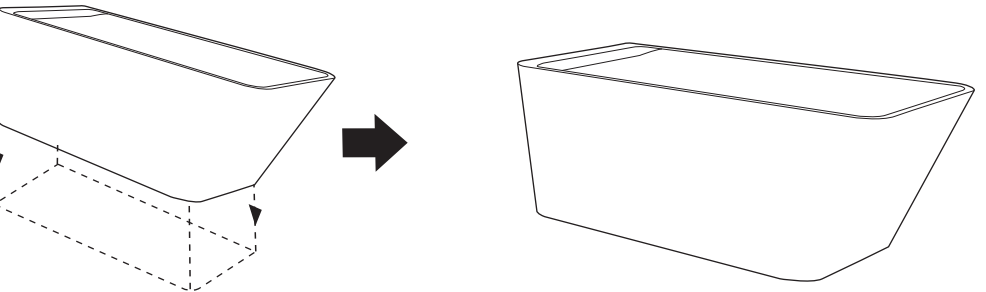3

1



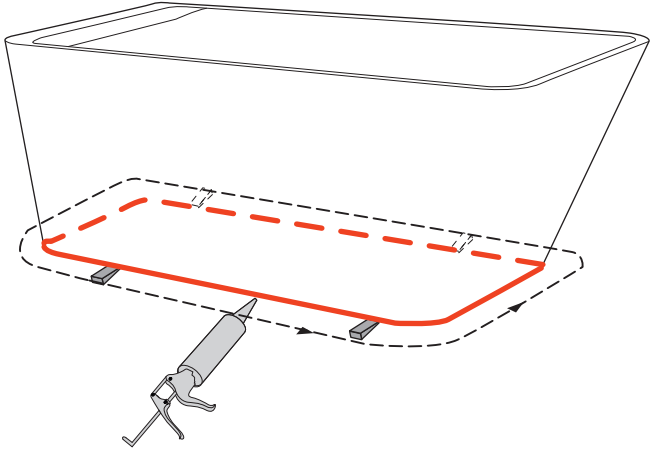

EN

Installation
Before fitting: remove packaging and inspect the bath. The installation of the bath will be seen as acceptance of quality.


Please note: Since the production of solid surface baths takes a lot of manual operations, also in the finishing, small irregularities in the surface are inevitable and inherent to the chosen product/material. Shrinkage lines, air holes, casting marks and blemishes on the underside of the bath (where they cannot be seen when the bath is turned upright) do not adversely affect performance and should not be regarded as defects.

We strongly recommend that you use a suitably qualified installer. Instructions must be adhered to. We cannot accept responsibility for incorrect installation

Everyday cleaning
It is advised that the Solid Surface bath is cleaned regularly, to remove any insoluble products. Warm soapy water should be used and then the bath should be wiped. Don't let cleaners soak in.
The Solid Surface bath has good resistance properties to acids but should not come into contact with alkalis or organic solvents, such as caustic soda, and by some multi-surface cleaners, wc cleaners, Bleaches, Harsh solvents, Burning cigarettes, strong chemicals such as dry cleaning fluids, paint strippers, Acetone, Citrus based chemicals or nail vanish remover.
It is advisable always to run in some cold water before turning on the hot tap. We recommend the hot water be no more than 65 degrees C.

Care and Maintenance
Repairing a scratch: if any scratches occur during installation these can be removed by rubbing with a 2000+ grit waterproof abrasive paper and water. Re-polish the surface afterwards using a neutral automotive color restorer or household metal polish. Deeper scratches may require a more abrasive paper to be used initially. If this is the case work your way up to 2000 grit gradually and repolish.
It may be possible to polish very fine scratches away without using abrasive papers: scrubbing gently with a soft brush or plastic pad (not metal scouring pad) and a mildly abrasive cream cleaner. Afterwards scrub the whole area with plenty of clean water and re-polish as before.

S&S cannot be held responsible for a negative result of scratch removal by the user. We recommend contacting a specialist company to remove scratches..

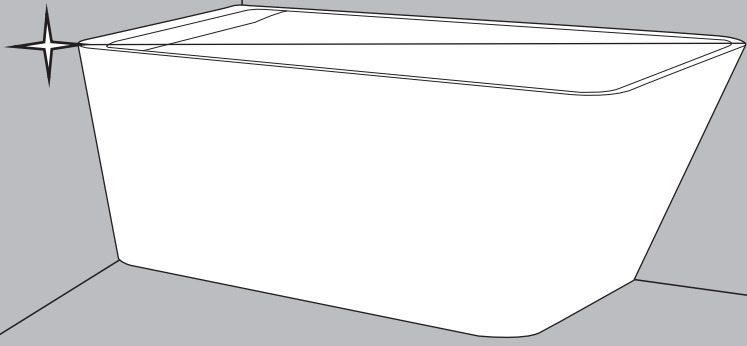

2